

XLAV SSB series Knockouts removal instructions


1. Tools required: Slot screwdriver, hammer.



2. Using a slot screwdriver, aiming at the edge of the knockout, gently tap the screwdriver with a hammer until the screwdriver blade goes through.



3. Repeat until 4 opposite holes are made.

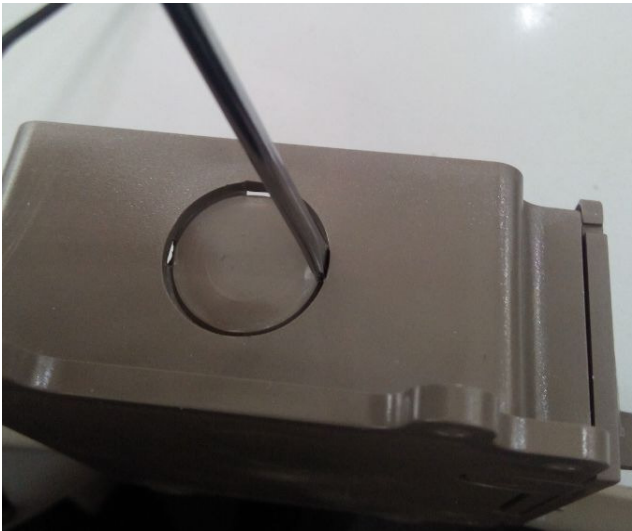

4. Repeat again on the other areas of the edges until the knockout is removed.

